

Brother DR3425 DRUM COUNTER RESET

**Make Sure the Machine Is Turned ON
For HL VERSIONS:**

< HL-L5000D / HL- L5100DN / HL-L5200DW / HL- L6200DW >

- 1) Ensure that the front cover / door is open.
- 2) Press and hold OK for about 2 seconds to display Drum UNIT, then press OK.
- 3) Press ^ to select Reset.
- 4) Close front cover / door

For HL / DCP / MFC Versions:

<HL-L6400 / DCP-L5500D / DCP-L5600DN / MFC- L5700DN /
MFC-L5755DW / MFC-L5900DW / MFC-L6700DW /
MFC-L6900DW>

- 1) Close Front Cover.
- 2) Press 'X' to interrupt the error.
- 3) For HL Models:
Press Tools (Settings) Machine Information > Parts Life.
For DCP and MFC Models:
Press Tools (Settings) All Settings > Machine Info.
> Parts Life.
- 4) For HL Models:
Press Drum Life until the Touchscreen message changes,
then press YES.
For DCP / MFC Models:
Press Drum until the Touchscreen message changes, then
press YES.
- 5) Press Home Icon.